

The following parts are included in this maintenance kit:

1	Fusing Assembly	C3141-69002(RG5-1557)
1	Separation Pad	RF5-0302
1	MP Pick Up Roller	RB1-1411
1	500 Sheet Feeder Pick Up Roller	C3760-60506
1	Transfer Roller	RG5-1410-000CN
2	Latex Gloves	

Damage to the core can occur if it is packaged incorrectly. Re use this packaging to ship the core back.

A core charge will be applied if the core is received in non-repairable condition.

★ ★ ★ ★ WARNING ★ ★ ★ ★

Turn the printer off, unplug it, and allow it to sit for 30 minutes before performing these maintenance procedures.

This printer maintenance kit provides you with the parts most commonly used to rebuild HP LaserJet 4V/4MV printers. Using the HP LaserJet Printer Maintenance Kit helps you eliminate repeat service calls and maximize the paper feed and print quality performance of your laser printer.

Recommended Maintenance Level:

The parts included in this kit have a variable service life that is highly dependent upon printer application, operating environment, user maintenance and the print media used. Any printer servicing should include inspection of the components, particularly in the presence of error messages and/or image defects.

Caution:

Please be sure to refer to your printer service manual for detailed instructions on how to remove and replace these printer parts.